


LI-USB30-IMX264 SETUP GUIDE

Install Driver

- 1) Connect the USB 3.0 cable to camera.
- 2) Plug the USB into USB 3.0 port on PC.
- 3) PC will search and install driver automatically.



4) After install the driver, camera device can be found in Device Manager.

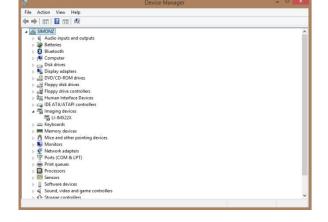

PC Software

- USB3.0 Camera Tool
- 1) Download CameraUSB30_3_x_x.7z and vcredist_x86.exe from link: <u>Here</u>
- Install vcredist_x86.exe and Uncompress the package.
- 3) Connect the camera to PC.
- 4) Open "CameraTool.exe".


Note: We also have SDK for Camera Tool software, and it can be downloaded from link below. https://www.dropbox.com/sh/49cpwx0s70fuich/2e0 mFTJY

- AMcap
- 1) Download AMcap from link below.

http://noeld.com/programs.asp?cat=video

- 2) Install AMcap.
- 3) Run AMcap after connecting the camera to PC.



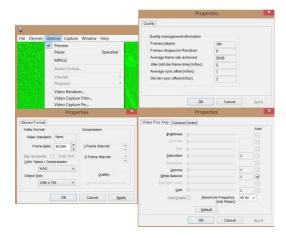



Leopard Imaging Inc.

48820 Kato Road, Suite 100B, Fremont, CA 94538, USA Phone: +1-408-263-0988 Fax: +1-408-217-1960 Email: sales@leopardimaging.com Website: www.leopardimaging.com

Firmware Update

- 1) Re-connect the USB camera.
- Open "LP_USB3_FirmwareUpdateTo ol.exe" which is in the "CameraUSB30_ x_x.7z" package.



- 3) Click "Erase" to erase the old firmware.
- 4) Click "FW Update" and select the .lif file.

Once the Firmware update is completed, the status will be updated as "Program

Succeeded". Please re-plug the camera before viewing the streaming.

Note: If the driver installation is not successful, and the "FW Update" button is not available any more, please check whether there's a "WestBridge" under device manager. The driver of "WestBridge" can be downloaded from the link below and updated manually. After the driver is installed correctly, please repeat the firmware update procedure.

 $\underline{https://www.dropbox.com/s/4yx2p31b7qo2gjx/WestBridge_driver.zip?dl=0}$

To update the driver manually:

a. Right click on "WestBridge" and select Update Driver Software.

b. Choose browse my computer for driver software. c. Click Browse, locate the driver at the downloaded and unzipped folder. (C:\temp\driver\bin\ for example)

d. Click next and complete the installation process.



48820 Kato Road, Suite 100B, Fremont, CA 94538, USA Phone: +1-408-263-0988 Fax: +1-408-217-1960 Email: sales@leopardimaging.com Website: www.leopardimaging.com